

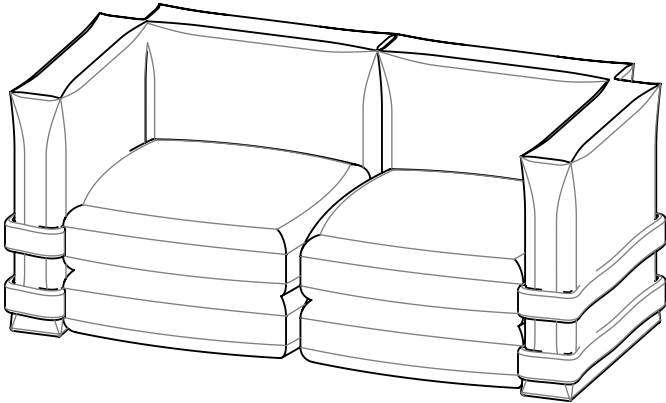
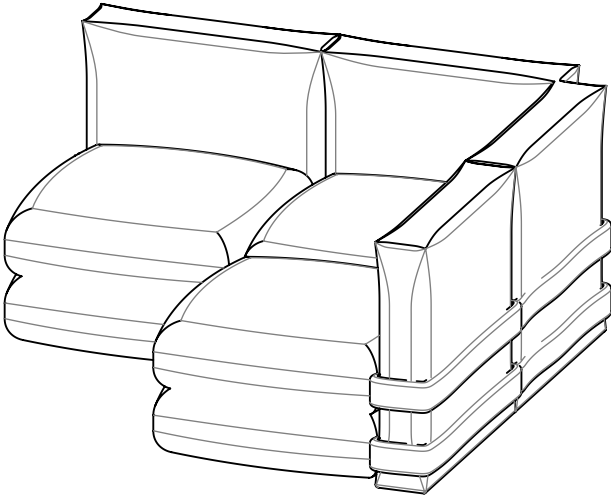


COMPONENTS

1. CENTRAL MODULE

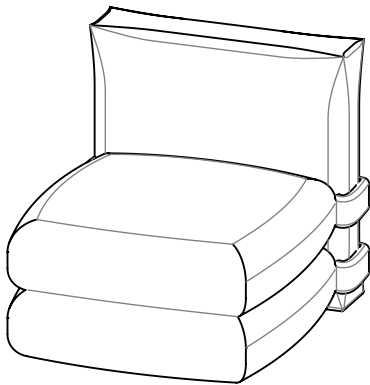

2. CORNER MODULE

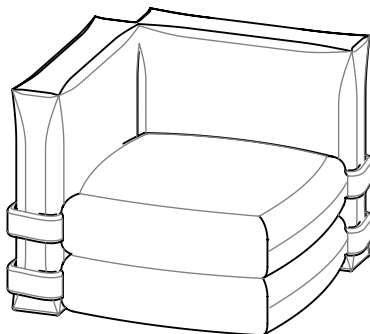


ACCESSORIES

3. CONNECTION SET

3.1 DIN 7380 M10X35 (x4)




3.2 connection tubes (x2)


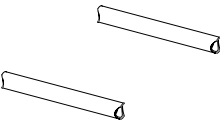


TOOL SET REQUIRED


ALLEN KEY

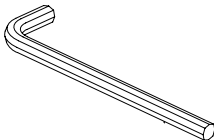


1. Connect all metal structures with the connection set accessories and mount the lateral structures next to the main metal structure

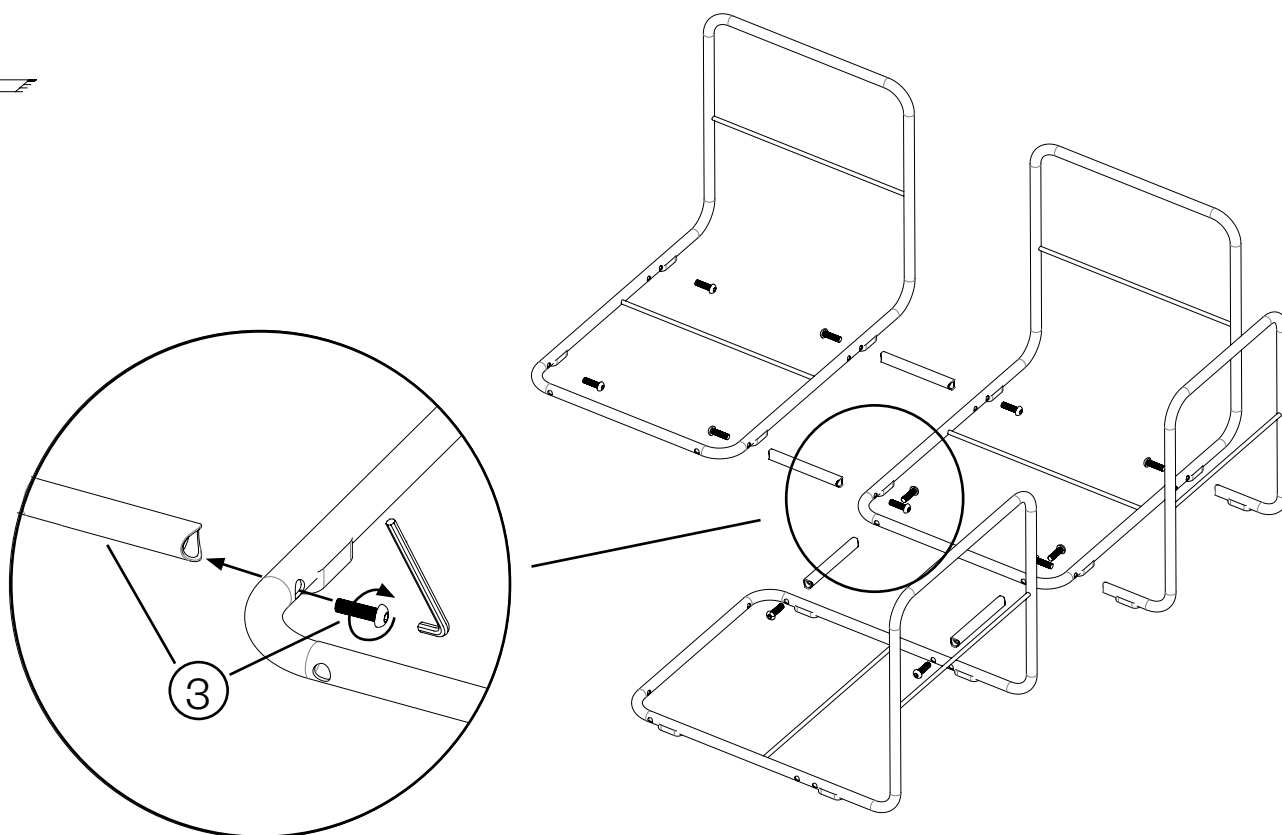


2. Cover the metal structure with the different pillows (see CENTRAL MODULE and CORNER MODULE INSTRUCTIONS)

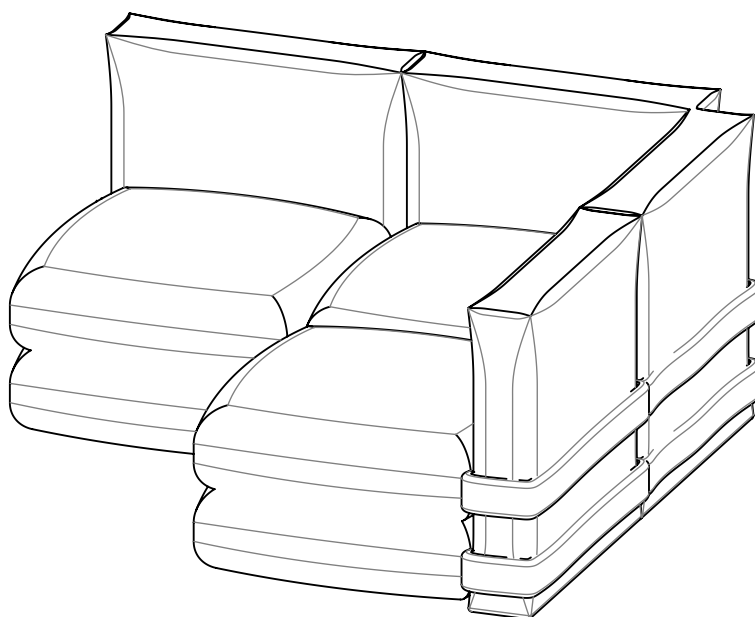

1. Connect all metal structures with the connection set accessories and mount the lateral structures next to the main metal structure



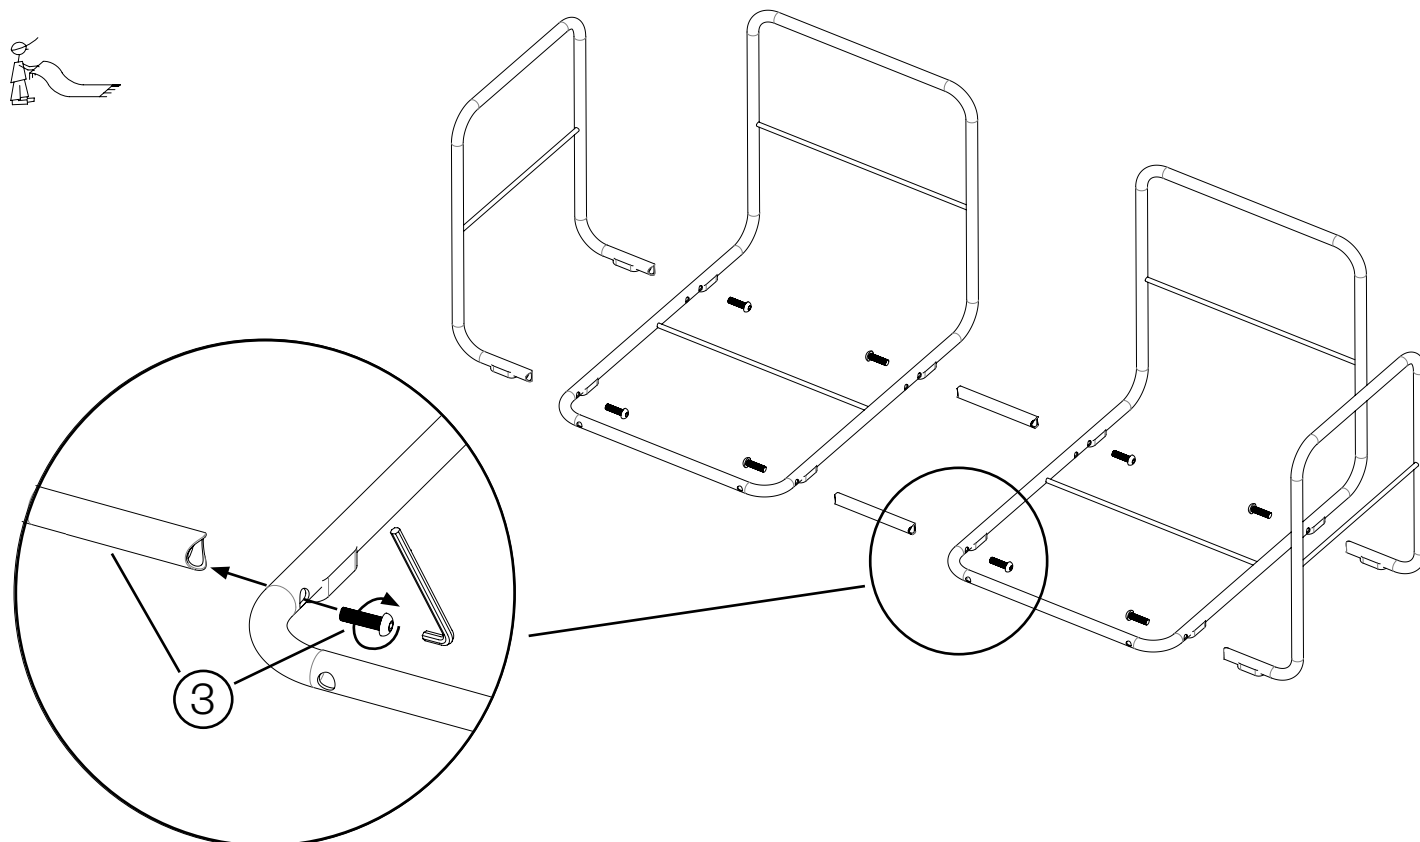


2. Cover the metal structure with the different pillows (see CENTRAL MODULE and CORNER MODULE INSTRUCTIONS)

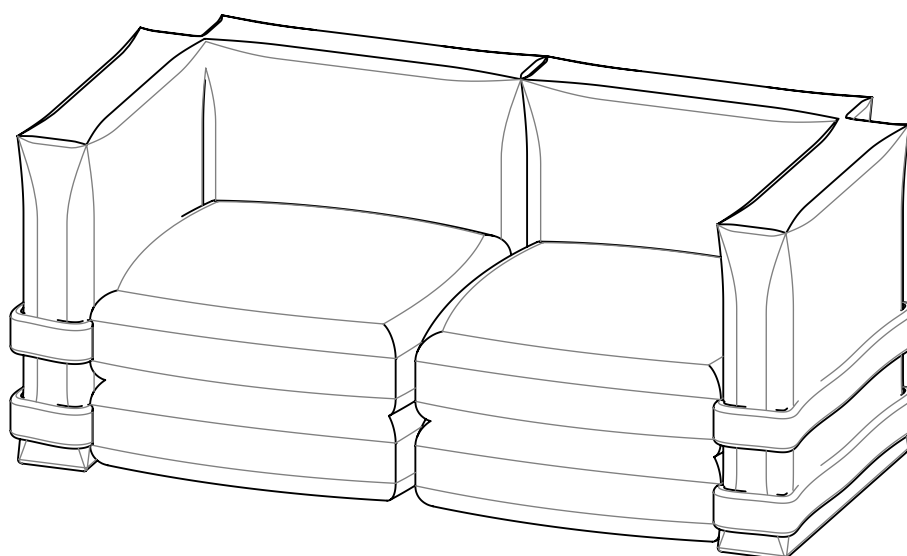


PILLOW SOFA
CUSHION COVER

MULLER VAN SEVEREN
2024

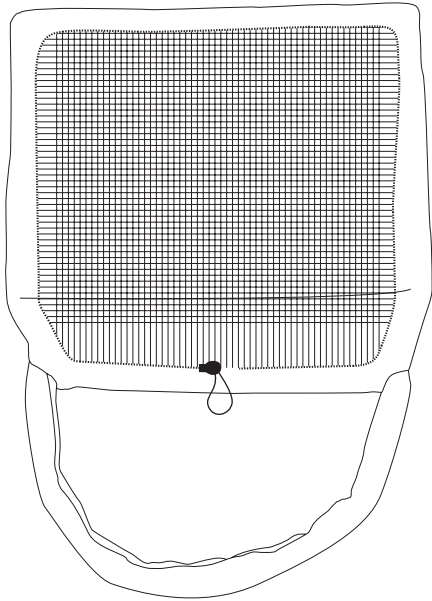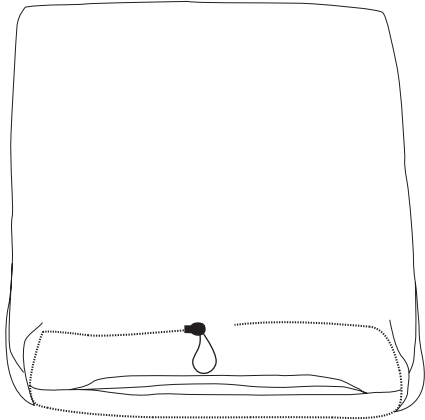


COMPONENTS


1. BACKREST CUSHION

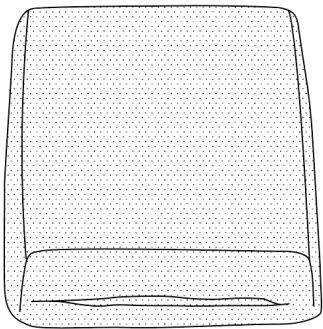


2. BACKREST SLEEVE

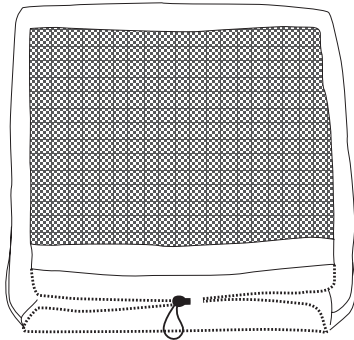


3. SEAT CUSHION

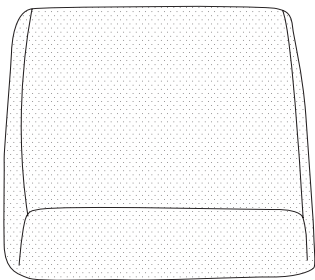


4. SEAT SLEEVE

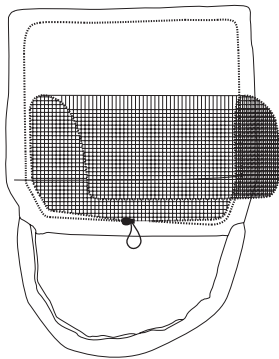


1. BACKREST: Place the cushion into the sleeve with the zipper totally open. Once covered, the cut part of the cushion should be facing out. Zipper should be on the thicker side of the cut face

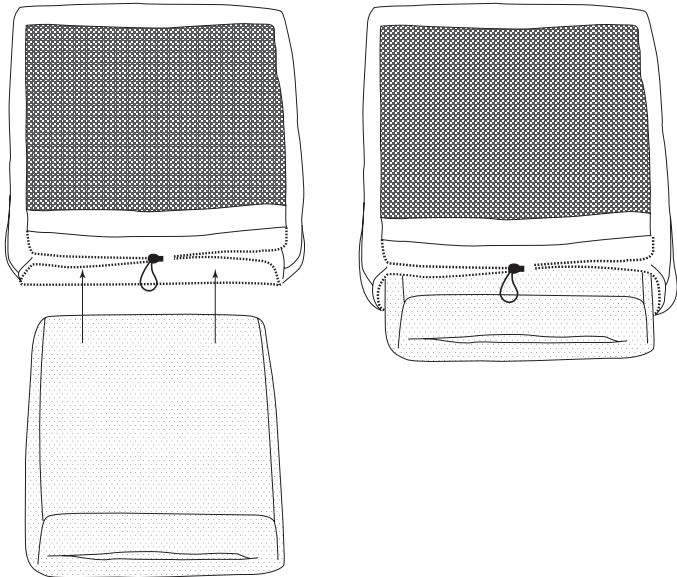

2. BACKREST: Insert the remaining dark sleeve in the cushion cut and zip the zipper.

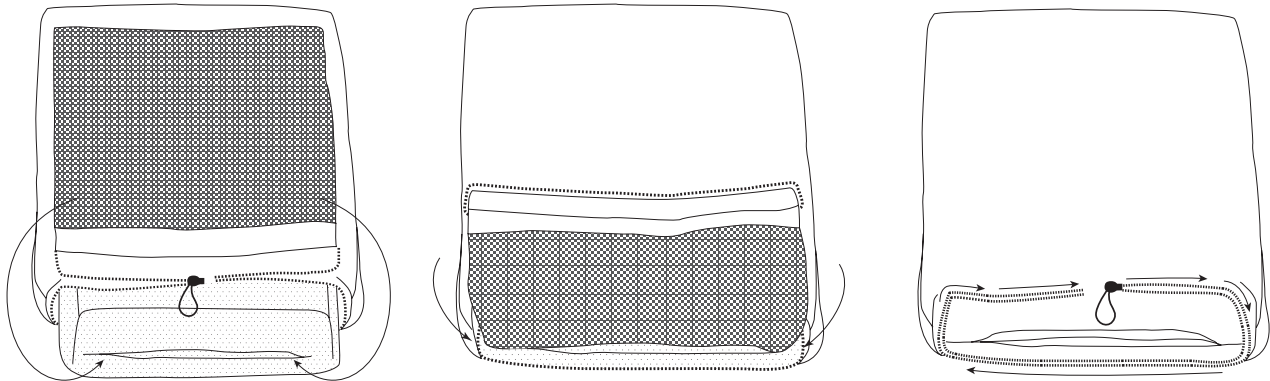

1. SEAT: unzip the sleeve completely and place the cushion into it. Cushion stitching should be facing up.

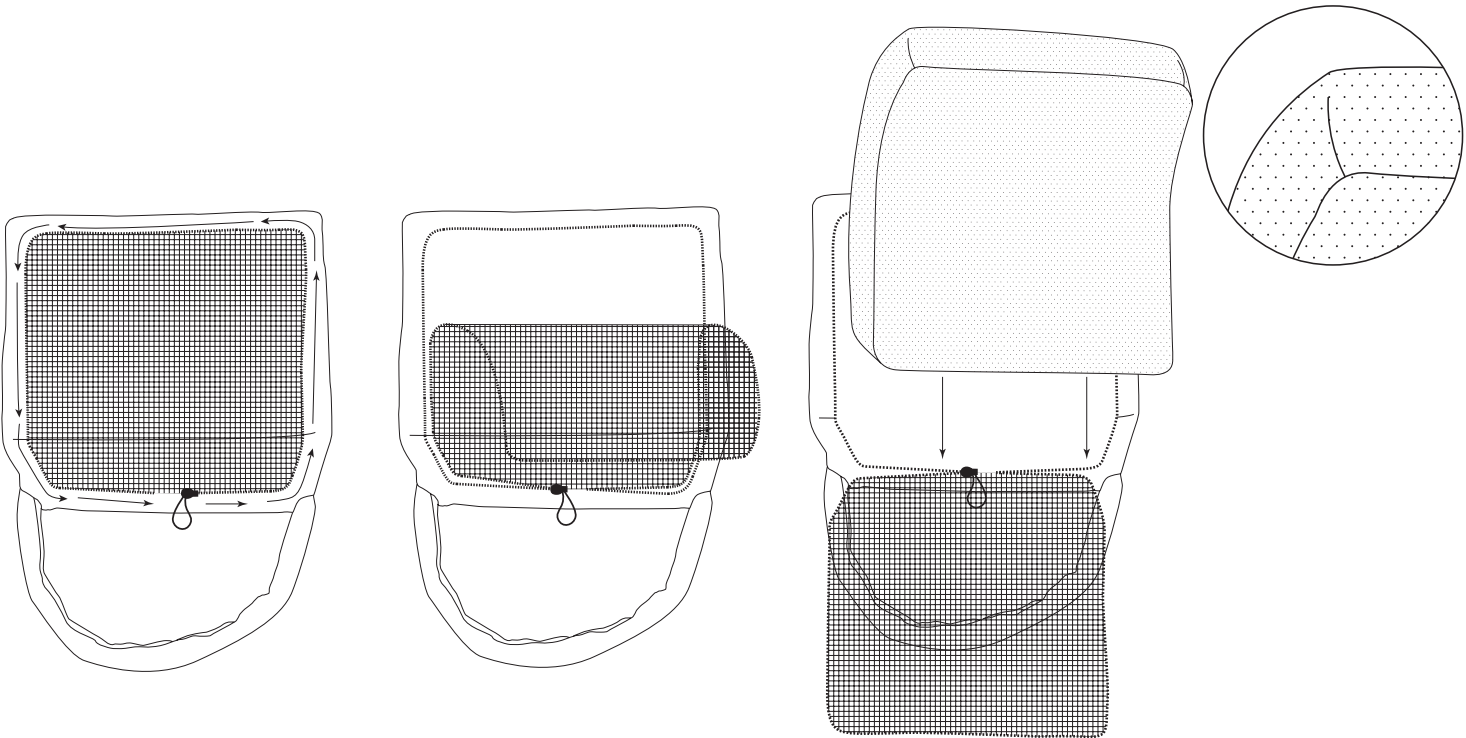

2. SEAT: once the cushion is completely in, zip the zipper.

