





PILLOW SOFA
ARMCHAIR

MULLER VAN SEVEREN
2024


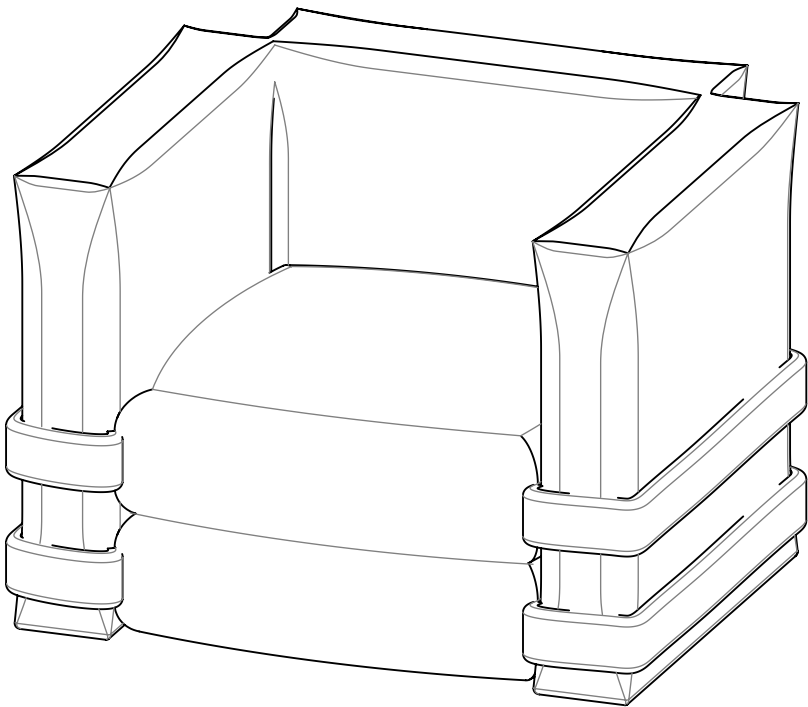


COMPONENTS

1. MODULE METAL STRUCTURE (x1)
2. LATERAL METAL STRUCTURE (x2)

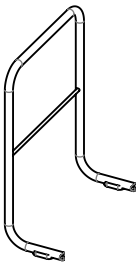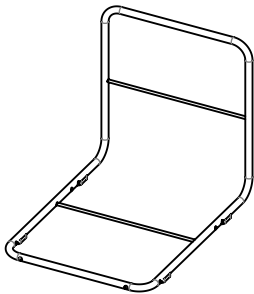


3. ARMOCHAIR SEAT CUSHION (x2)
4. BACKREST & ARMS CUSHION (x3)

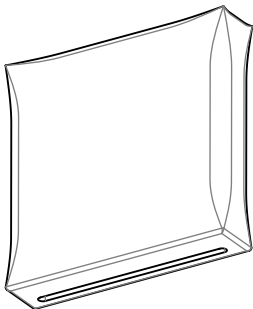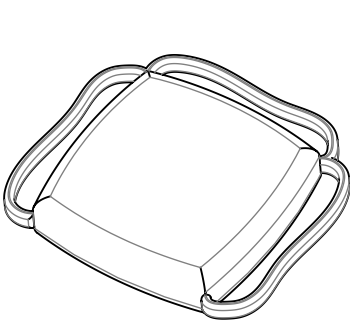


TOOL SET PROVIDED

5. DIN 7380 M10x35 (x4)


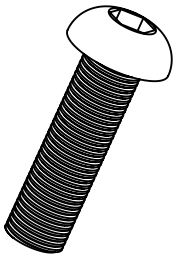


TOOL SET REQUIRED

ALLEN KEY

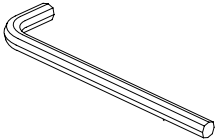


1. Screw the arm metal structures to the module metal structure

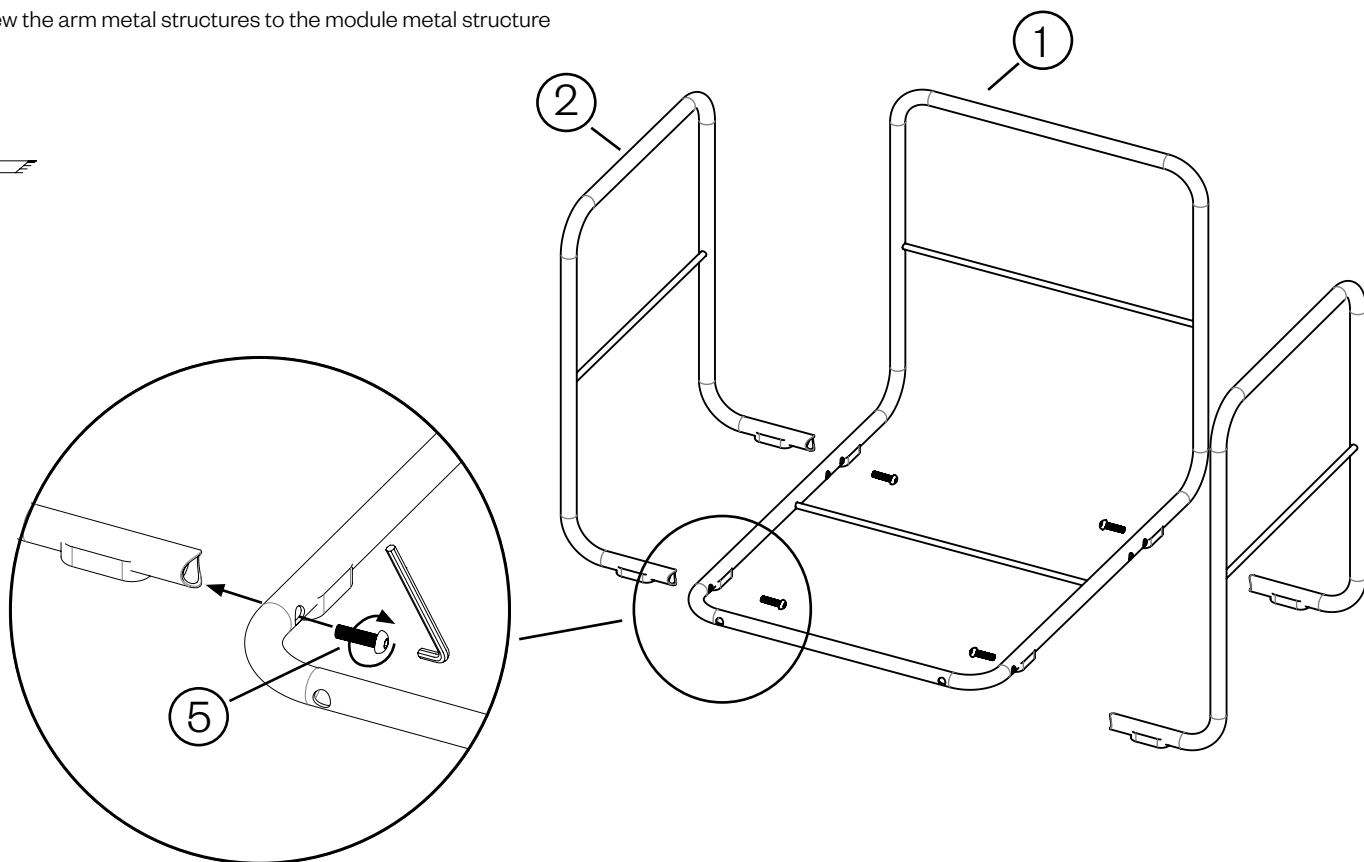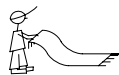




2. Cover the metal structure with the backrest and arm cushions.
*IMPORTANT: THICKER PART SHOULD FACE FRONT.

3. Place the seat cushions with the strips wrapping the backrest and arm cushions.

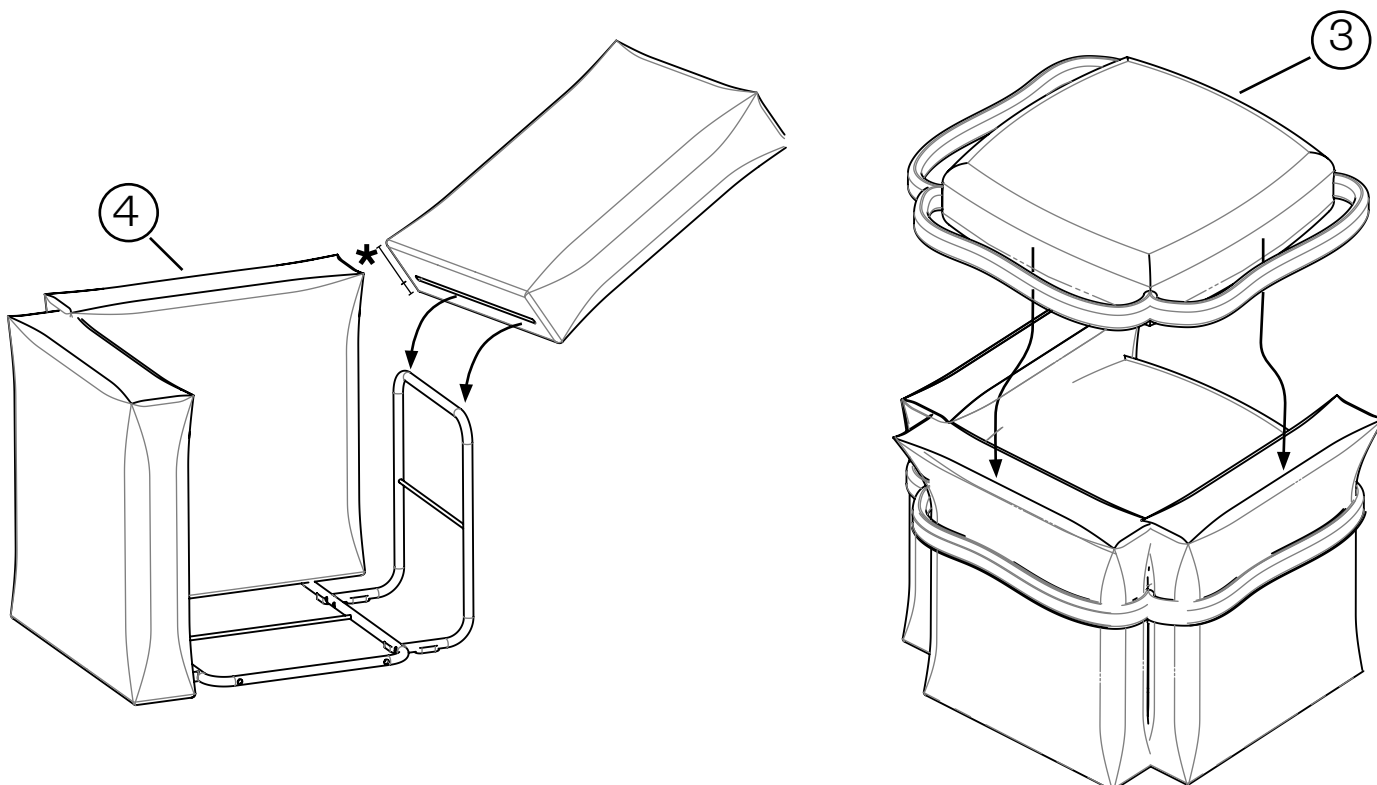


PILLOW SOFA
CUSHION COVER

MULLER VAN SEVEREN
2024

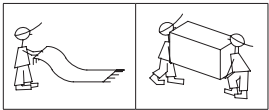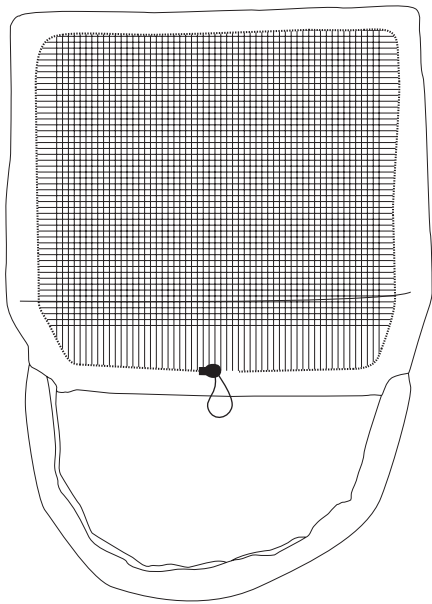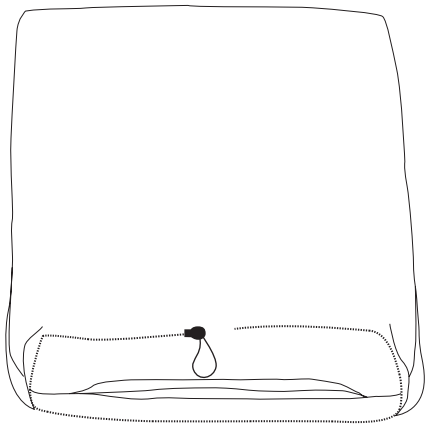


COMPONENTS


1. BACKREST CUSHION

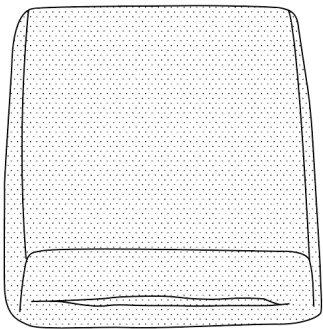


2. BACKREST SLEEVE

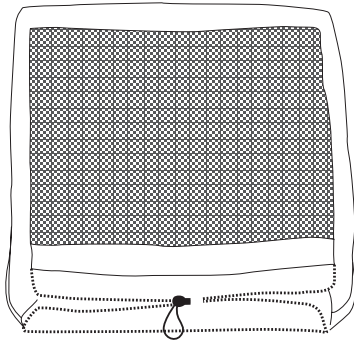

3. SEAT CUSHION

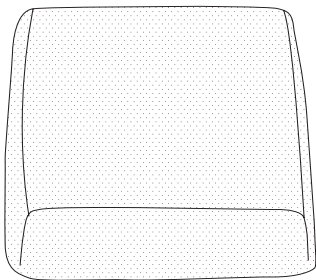

4. SEAT SLEEVE

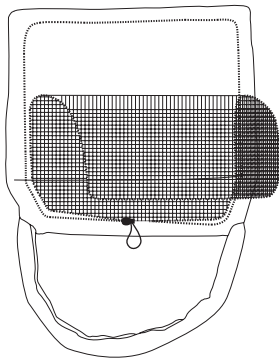


PILLOW SOFA CUSHION COVER


MULLER VAN SEVEREN
2024

01


1. BACKREST: Place the cushion into the sleeve with the zipper totally open. Once covered, the cut part of the cushion should be facing out. Zipper should be on the thicker side of the cut face

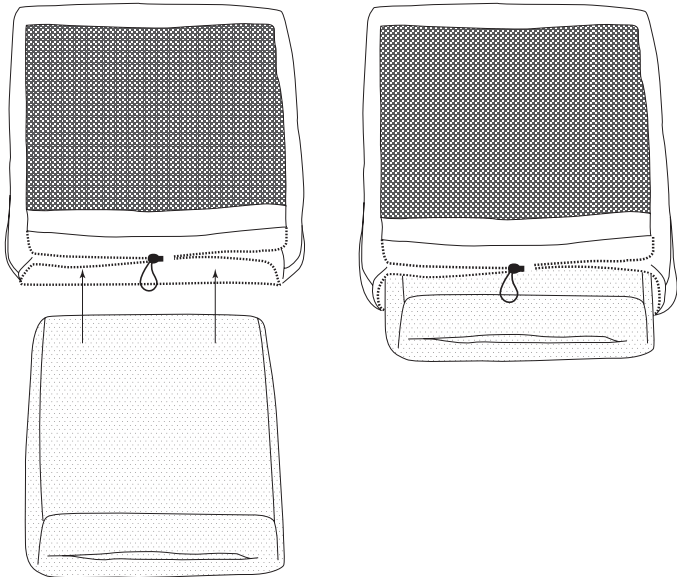

2. BACKREST: Insert the remaining dark sleeve in the cushion cut and zip the zipper.

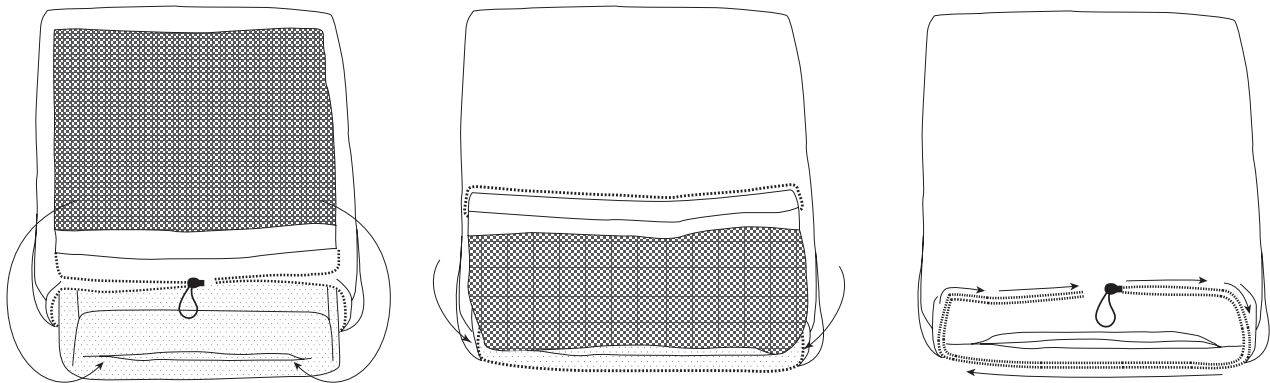

1. SEAT: unzip the sleeve completely and place the cushion into it. Cushion stitching should be facing up.

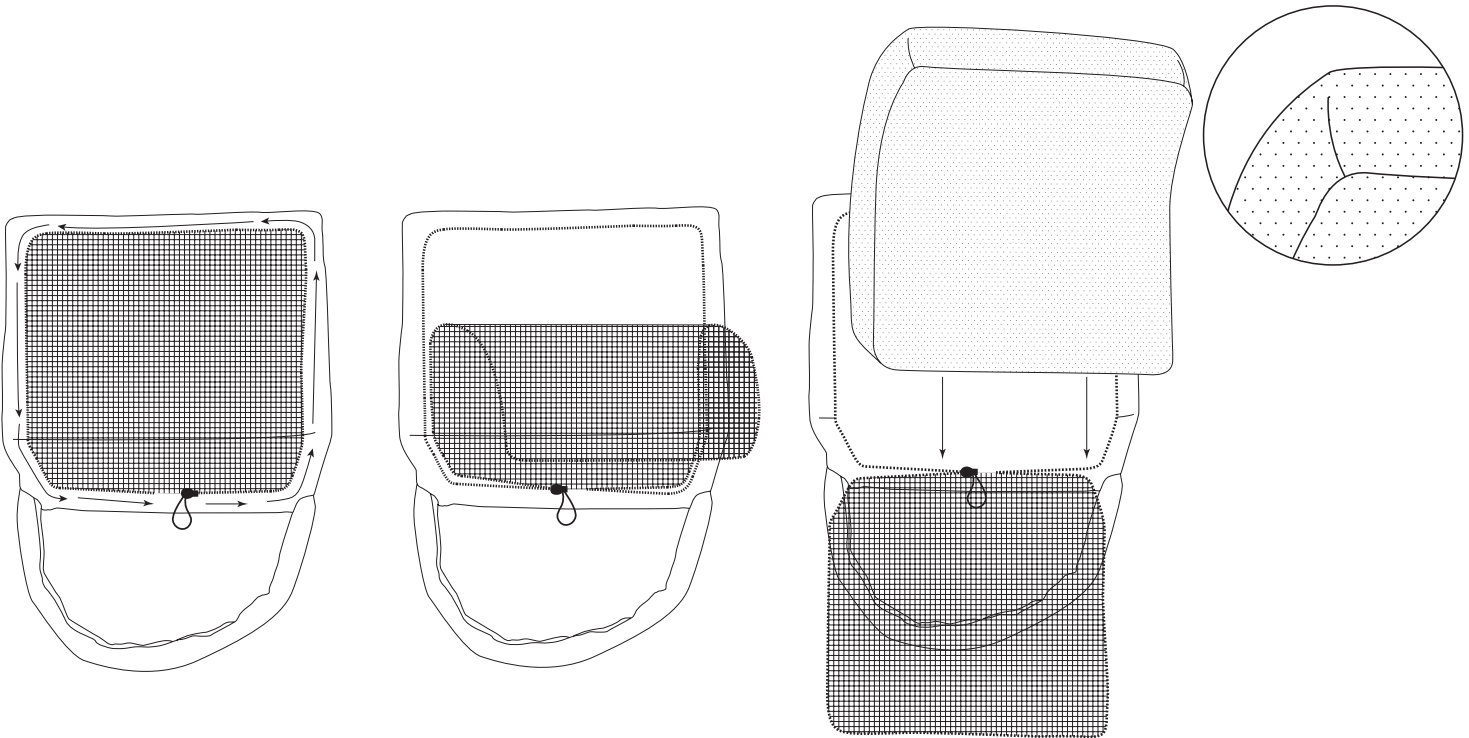

2. SEAT: once the cushion is completely in, zip the zipper.

