


Design House *Stockholm*

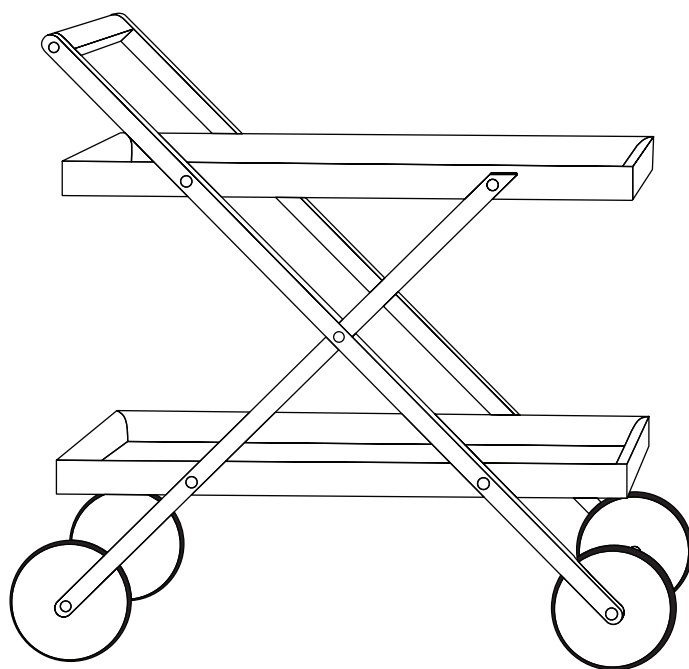


Assembly Instructions
Exit Trolley (2601-1000),
(2601-0190) & (2601-8400).


Components (tools):




Components:

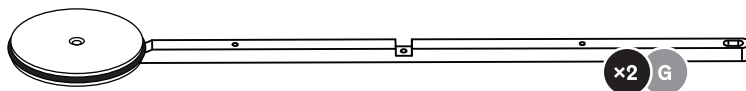


Step 1.

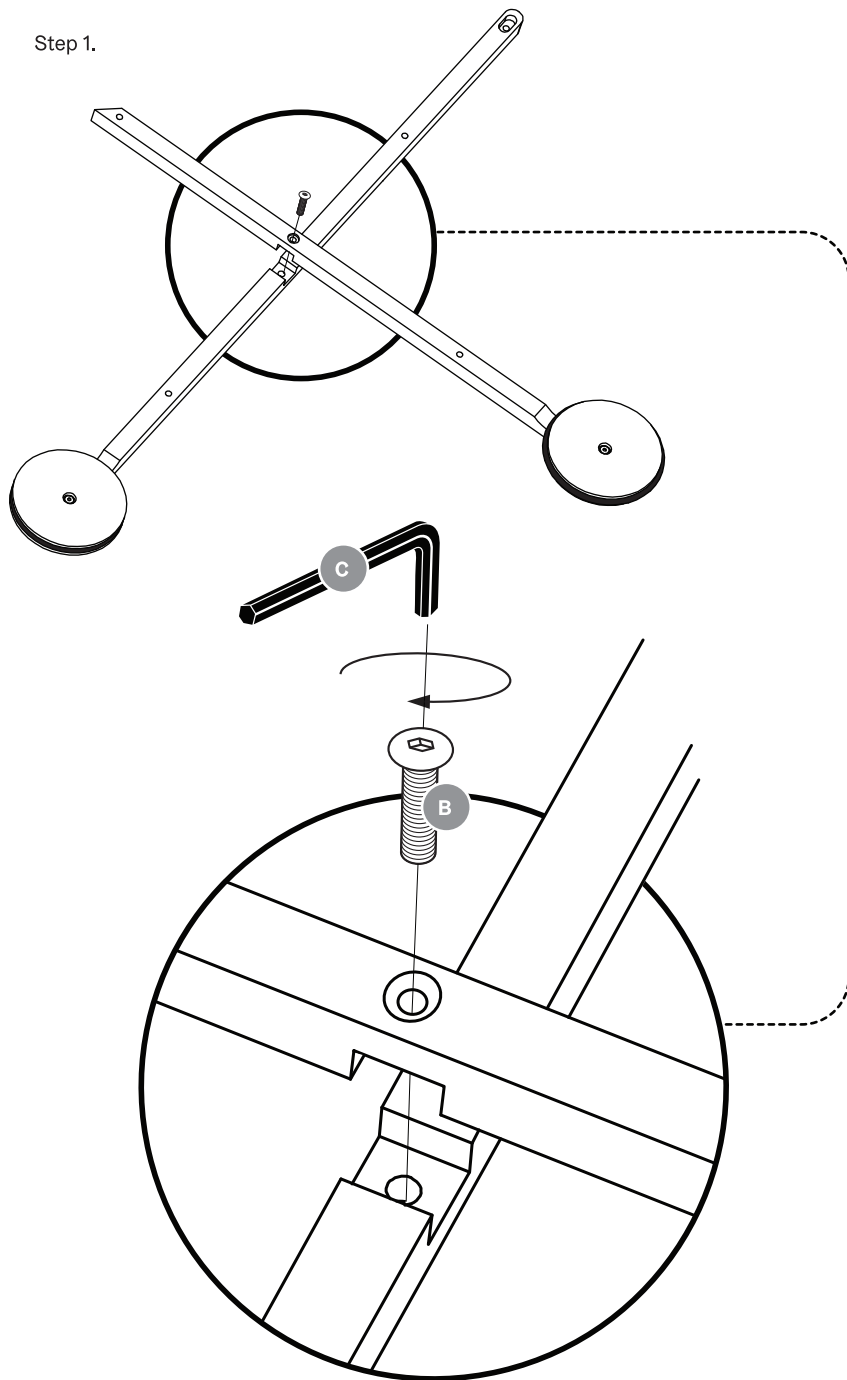

Step 2.

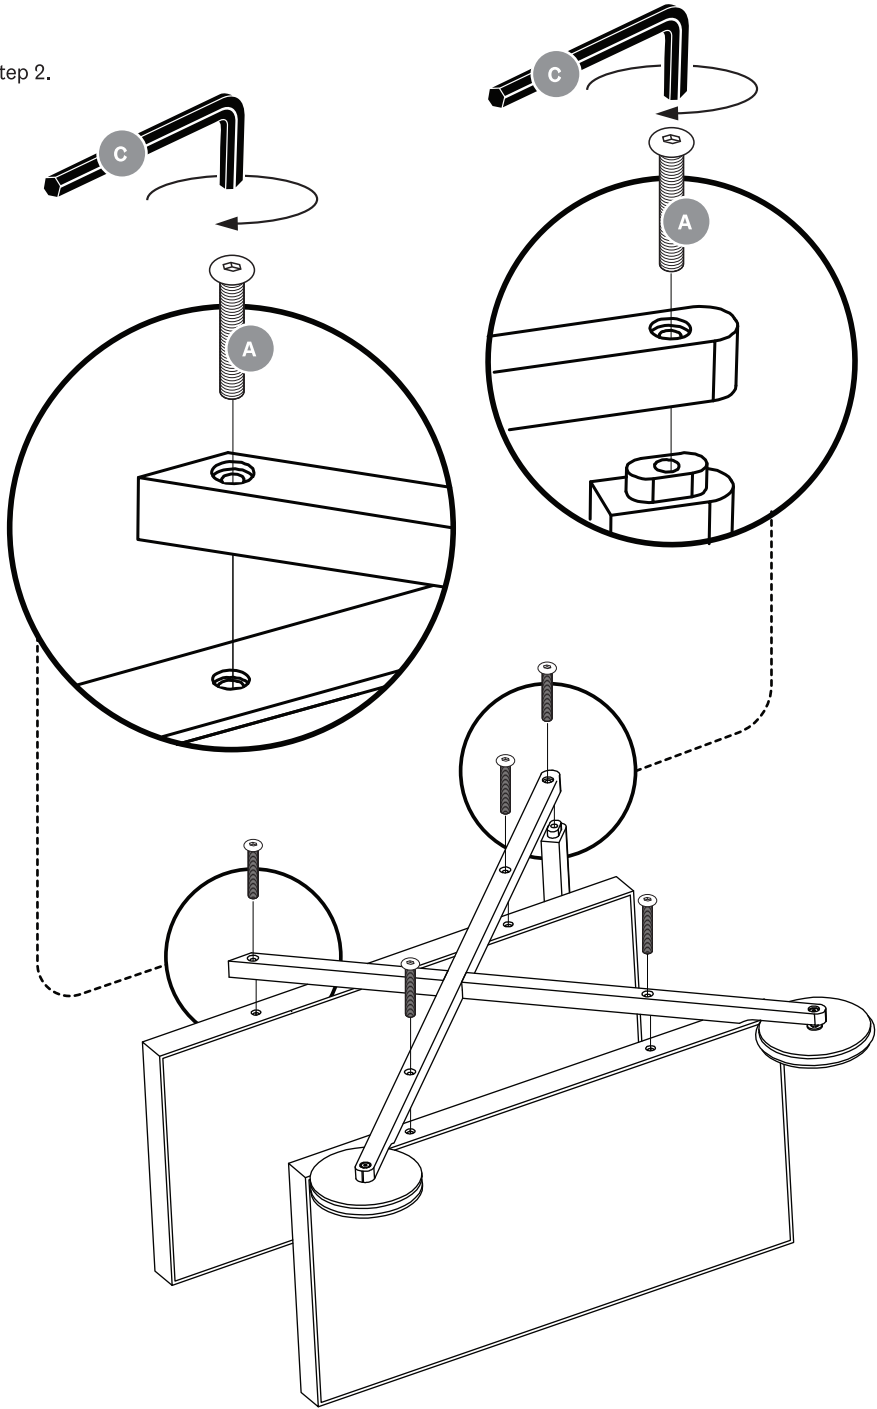

Step 3.

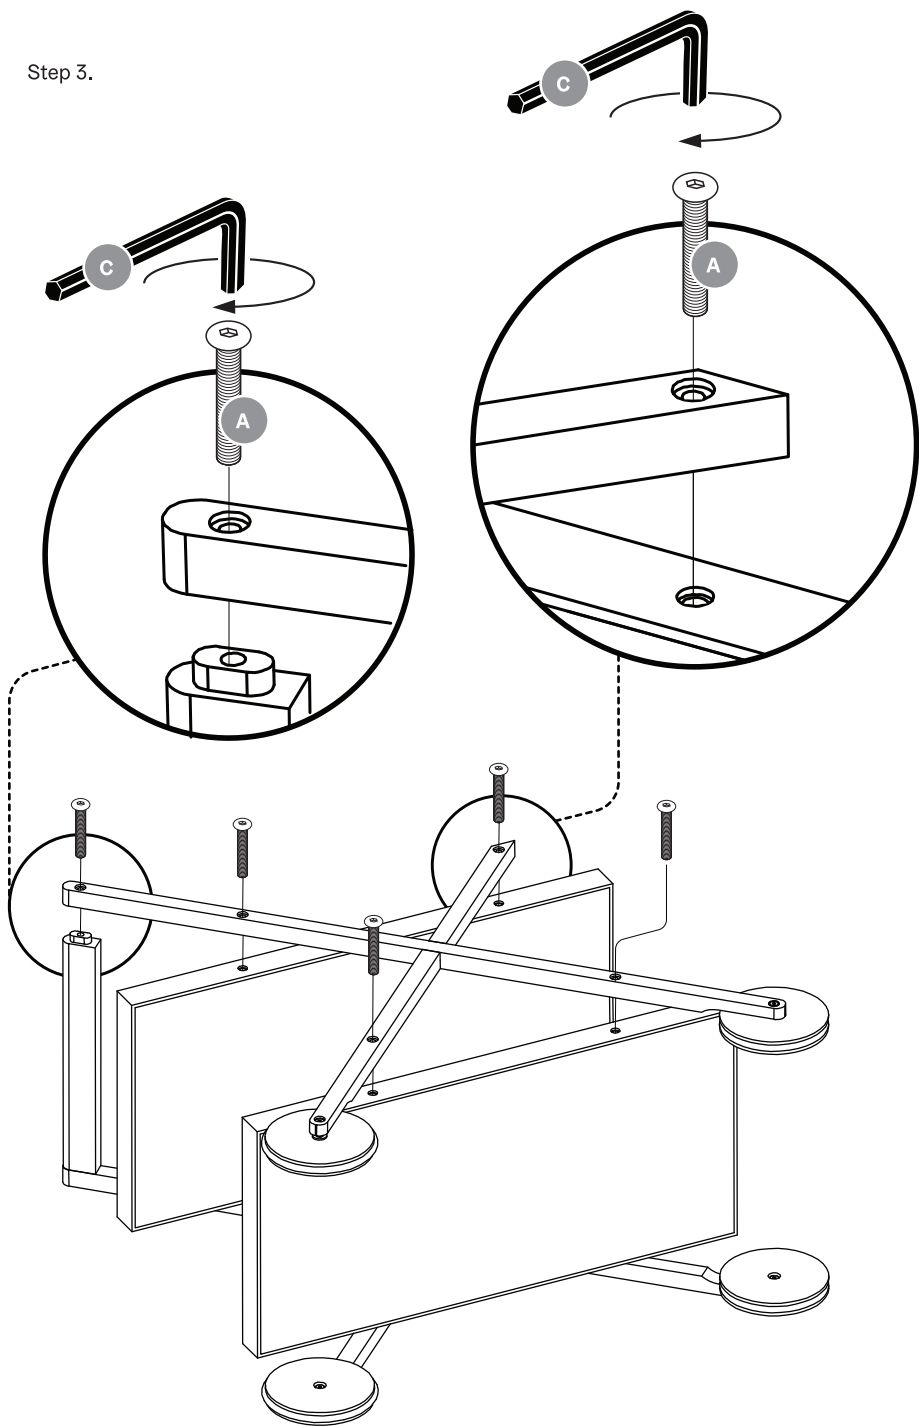



designhousestockholm.com
@designhousestockholm