



# WALL GUTTER

www.naknakdesign.com




Step 1




Take the back panel, flip over to the flat side and locate it at desire spot.

Step 2

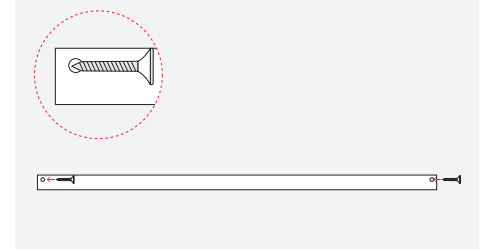


Screw the back panel on both side to the wall.

Step 3

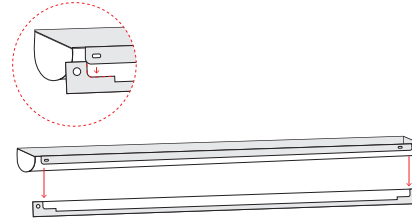

Slide the shelf on the panel.

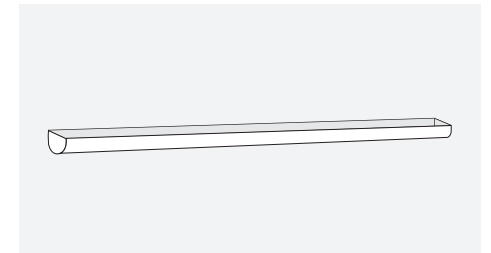

Complete.

## Materials



1 x2

